

# Filter replacment

## Remove the old filter:

**1**

Use or release the gas from the system until the gas tank is empty.

**2**

Remove the Gas & Fertilizer outlet cap. **Avoid breathing close to the opened outlet.**

**3**

**(A)** Wear protective gloves and remove the rubber seal from the Gas Outlet. **Remember not to throw away the seal**  
**(B)** Remove the filter using the string attached to the filter's cap.  
**(C)** Remove the rubber seal from the old filter and keep it

## Install the new filter:

**4**

Remove both cover stickers from the base and cap of the new filter.

**5**

Wear protective gloves and Install the rubber seal from the old filter Into the new filter. Make sure it is pushed all the way up.

**6**

Insert the new filter into the Gas Outlet pipe. Push the filter down firmly to ensure a good seal.

**7**

Place the ruber seal ring back (the ring from step 3) into its slot in the Gas Outlet pipe.

**8**

Close the Gas & Fertilizer outlet cap.

